

PORTABLE ELECTRICAL NAIL DRILL MACHINE MODEL HY-1001



Operating Instructions / Safety Guide

Safety/Warning

WARNING: To reduce the risk of electric shock use only with power supply cord provided with the appliance.

CAUTION: Shock Hazard. To provide continued protection against electric shock disconnect power supplier when not in use.

Caution:

This device contains a built-in lithium battery. Do not place or store equipment in a hot or humid environment for a long time. If the equipment is not used for a long time, please fully charge the product before use.

PORTABLE ELECTRICAL NAIL DRILL MACHINE MODEL HY-1001

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS AND DETAILS CAREFULLY BEFORE USING.

KEEP AWAY FROM WATER

DANGER: To reduce the risk of electric shock:

To reduce risk of death by electric shock:

1. Do not reach for an appliance that has fallen into water. Unplug immediately from receptacle.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it is able to fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Except when charging, always unplug this appliance from the electrical outlet immediately after using.
5. Unplug this appliance before cleaning

WARNING- To reduce the risk of burns, electrocution, fire, or injury to persons:


1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
2. Use this appliance only for its intended use as describe in this manual. Do not use attachments not specified by the manufacturer.
3. Never operate this appliance when it has a damaged cord or plug, when it is not working properly, after it has been dropped or damaged, or after it has been dropped into water. Return the appliance to a service center for examination and repair.
4. Keep the cord away from heated surfaces.
5. Keep the air openings free of lint, hair, and similar objects.
6. Never drop or insert any object into any opening.
7. Do not use outdoors or operate while aerosol (spray) products are being used.
8. Do not use this appliance with a damaged or broken comb, as it has the potential to result in facial injury.
9. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to off position (e.g. "0") then remove plug from outlet.
10. Plug charger directly into receptacle - do not use an extension cord.
11. Unplug charger before plugging or unplugging appliance

12. For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance
13. The battery must be removed from the appliance before it is scrapped;
14. The appliance must be disconnected from the supply mains when removing the battery.
15. The battery is to be disposed of safely.

Operating Instructions

SAVE THESE INSTRUCTIONS

Please read this INSTRUCTIONS carefully and keep it in an accessible location so you may refer to it later.

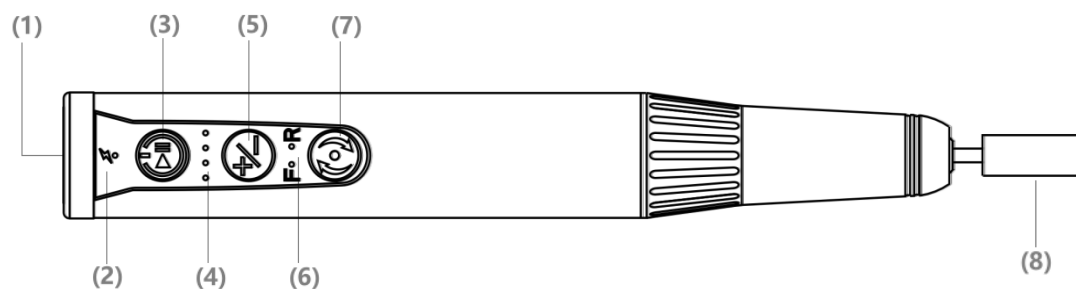

LIST OF PARTS AND ITS USING FUNCTIONS:

- (1)TYPE-C charging port: please use only matched USB head (TYPE-C) and suitable Input Voltage (5V).
- (2)Battery indicator light: turns green and stays lit while in the state of fully charged.
- (3)Speed Indicator light: Power and pause: long press to power ON/OFF and short press to PAUSE.
- (4)Gears indicator: RPM indicator divided into 4 sections and gradually lights up from 1st to 4th gear. All 4 lights are on when 4th gear is reached.
- (5)Speed plus/minus button for increasing and decreasing RPM: there are 4 gears in total. Gear will shift after the button is pressed each time, and it will shift to 1st gear if you continue to press the button while in 4th gear.
- (6) F/R indicator: lights up correspond to the current rotated direction.
- (7)Forward and Reverse button: short presses to shift between Forward and Reverse.
- (8)Drill bit: insert or change your preferred drill bit.

COMES WITH ACCESSORIES:

Electrical Nail Drill *1

TYPE-C USB Cord *1

Instructions *1

Nail Drill Bit *6

Sanding Band *6



SPECIFICATIONS:

Model: HY-1001

Input Voltage: 5V

Output Voltage: 5V / 1A

Power: 10W

AFTER USE

This appliance requires little maintenance and contains no user-serviceable parts. Do not try to repair it yourself. Refer it to qualified service personnel if servicing is needed.

TO CLEAN:

- Only use a dry cloth for cleaning.
- Refrain from cleaning it with harmful chemicals or detergents.

TO STORE:

- Properly store the power cord and keep it away from heated surfaces.
- Do not store the machine in a hot or humid environment, such as inside a parked vehicle or other hot environments.
- Keep the machine dry and away from oil and grease, and store it in a cool, dry place

